





Heavy Duty Conveyor Arm / Lift Assist System

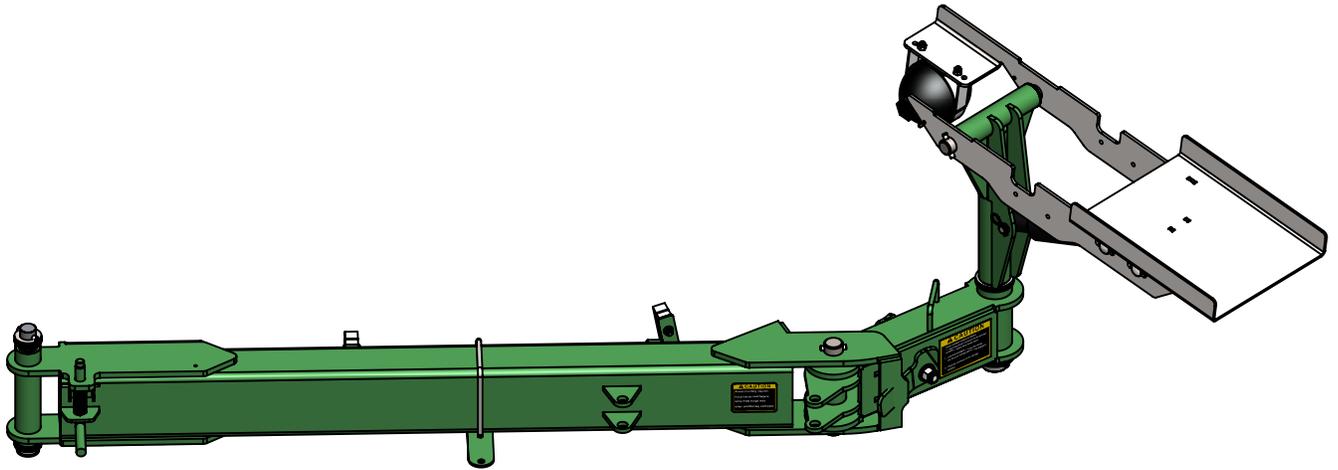

Installation Instructions

- **JAS5800A - Hydraulic Lift Assist**

Conveyor Arm Installation

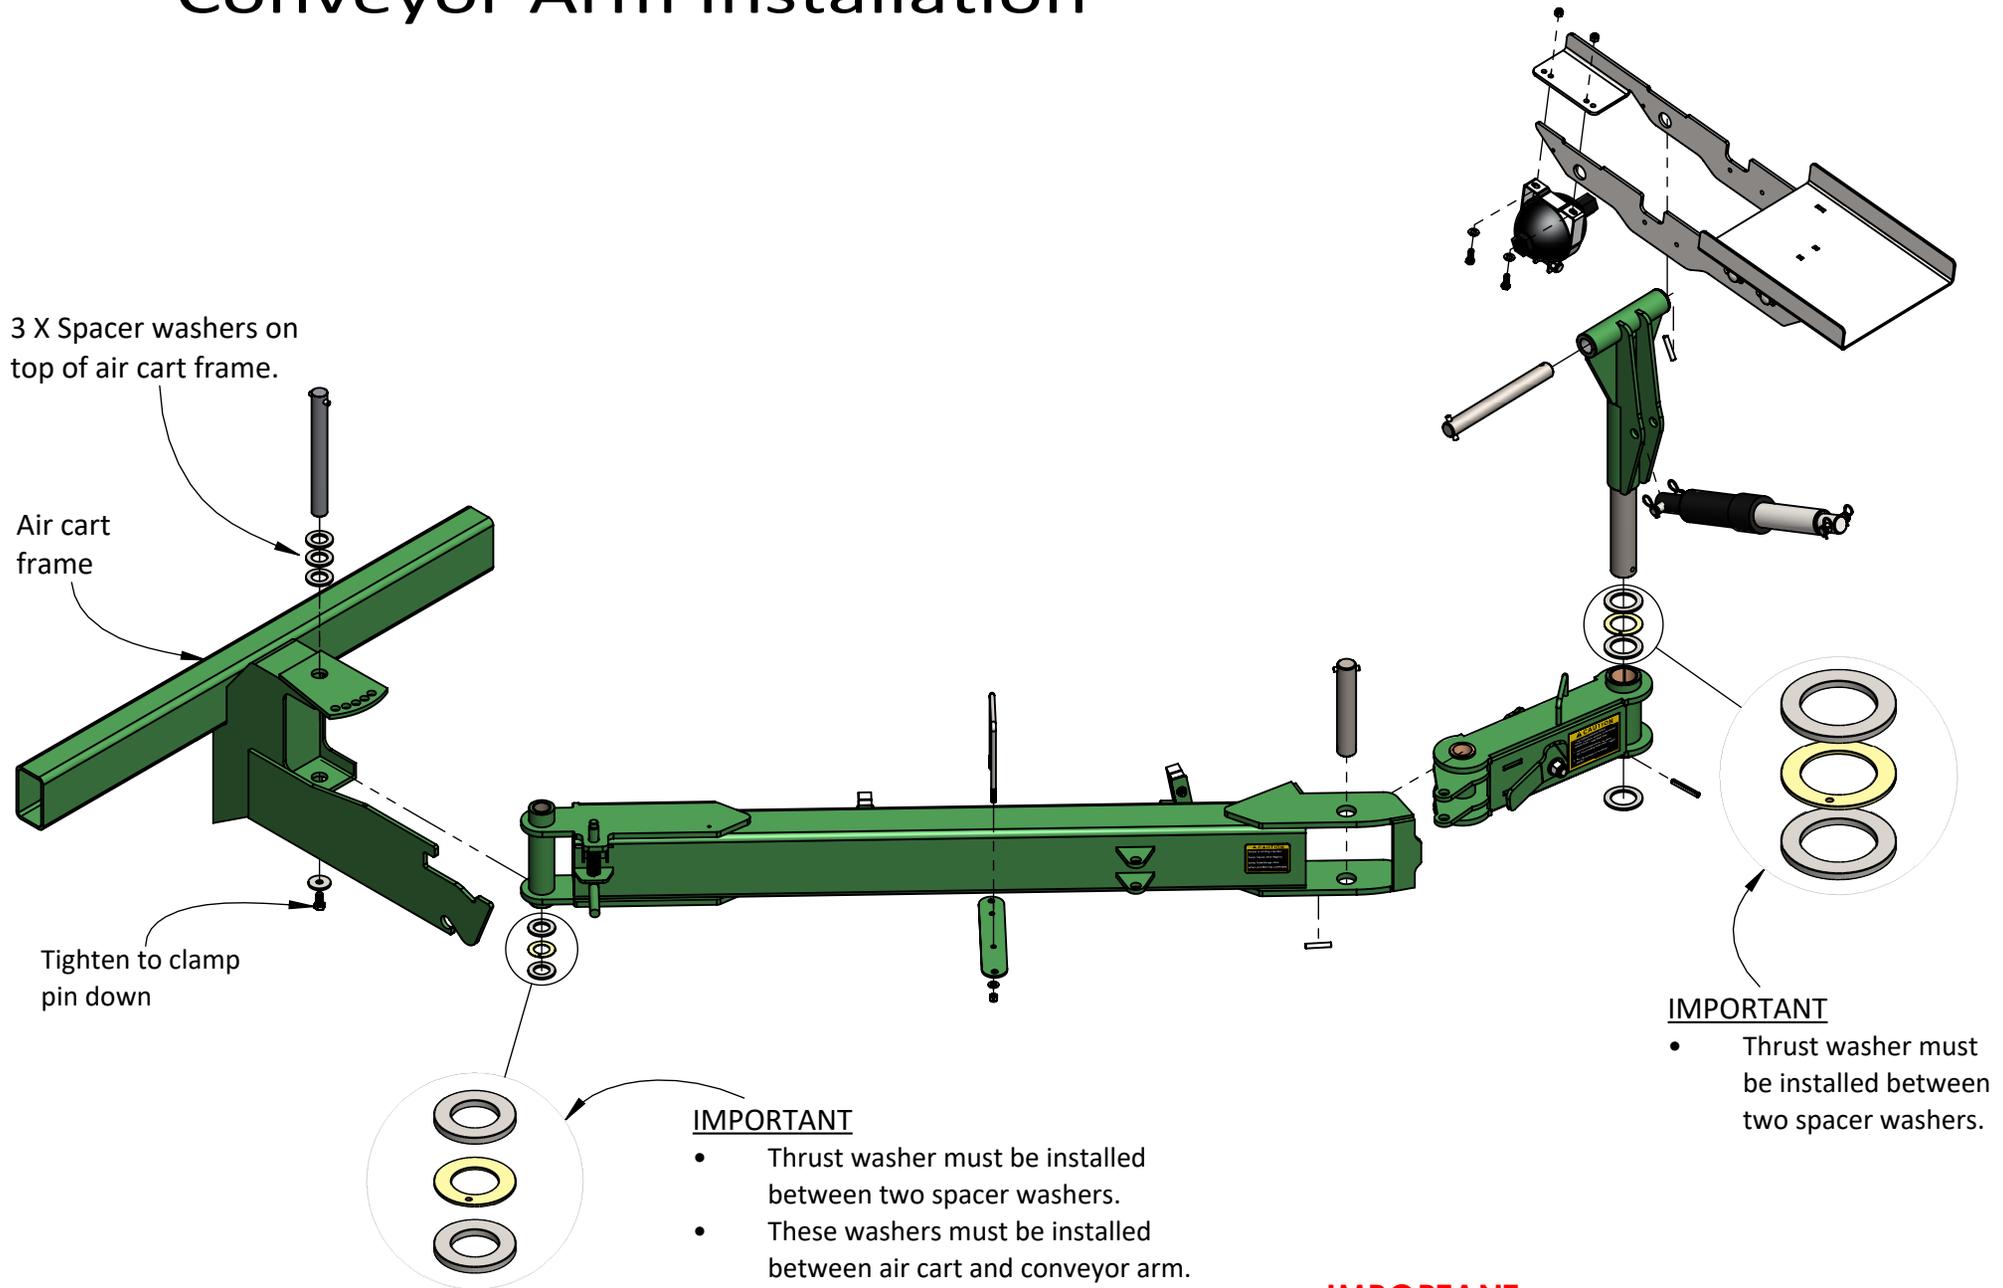

IMPORTANT:
TO PREVENT THREAD SIEZE, APPLY
ANTISIEZE TO ALL THREADED
STAINLESS STEEL SURFACES.

Precharged Hydraulic Lift Assist Installation

WARNING!

Hydraulic system is pressurized.

DO NOT open valve before hydraulic system and conveyor are fully installed.

1. Install cylinder (as pictured)
2. Install accumulator
3. Install valve mounting bracket
4. Using cable tie mounting bases, route hydraulic hoses
5. Attach ball valve label
6. Once hydraulic system and conveyor are fully installed, unlock the valve and attach hydraulic valve lever, rotated correctly.
(see pictures bottom left)



Cylinder

Accumulator



Ball valve label.

Ball valve with mounting bracket.


Unlocking the valve



Locked Valve for shipping & installation (lever and retainer ring removed in picture)



Rotate locking clip 90° counter clockwise. Install retainer ring.

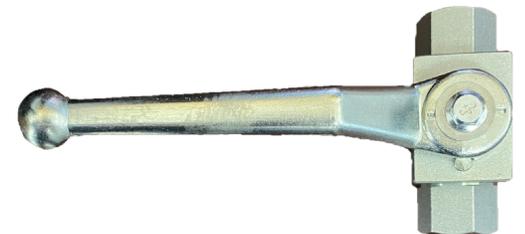

Lever reinstalled